


NOVA LUCE


9136462 9136463

1

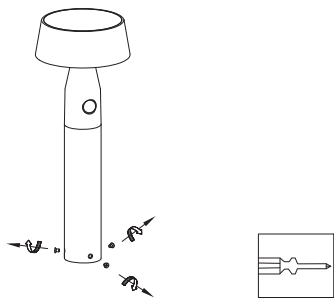


Dismantle parts by untying screws

2



Remove from the base

3

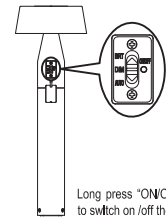


Long press "ON/OFF" for 4 seconds to switch on /off the power.

BRT : 100% brightness
DIM : 20% brightness
AUTO: 100% brightness when someone pass by

Make adjustments


Bollard light

4a

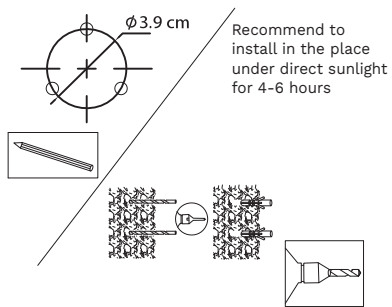


Mark holes, apply plastic anchors

5a

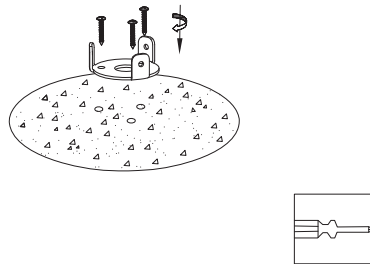

Tie up screws


6a

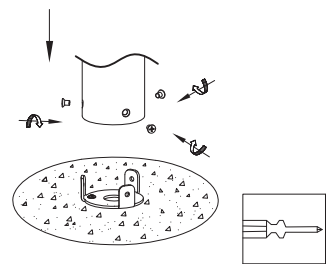

Fix it in place by tying up side screws

Spike


4b

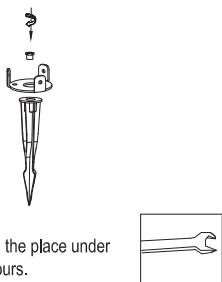

Recommend to install in the place under direct sunlight for 4-6 hours.


Tie up screws

5b

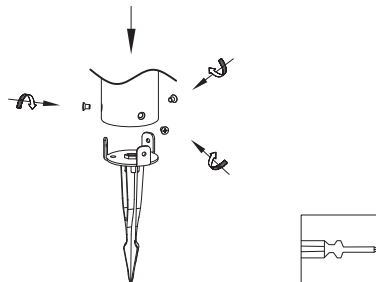

Tie up parts together & fix it in place

6b

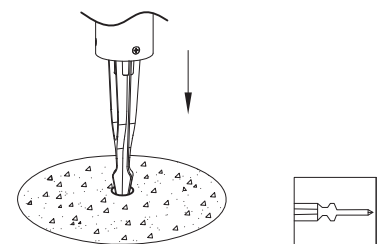

Insert into the soil

